
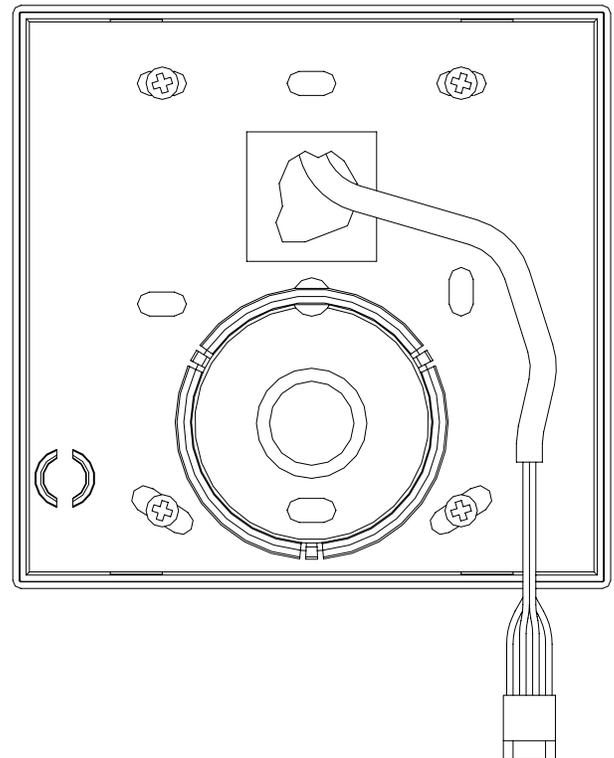


DESCRIPTION

Follow these instructions to install the Console. See the Controller Installation Manual and Owner's Manual for wiring, programming and other important information.


INSTALLATION

1. Unpack the Console and remove the front from the back by gently prying the unit open with a screwdriver.
2. Place the back housing against the wall at eye level so the horizontal edges are level. Make a mark on the wall at four of the mounting slots in the back housing and trace the wire access opening.
3. Drill a 3/16 diameter hole at each of the mounting hole marks and drive in a wall anchor. Drill or cut a hole in the wall for wire access.
4. Place the back housing over the wall anchors and screw it into place.
5. Attach the wire to the supplied cable assembly and plug the cable into the connector on the Console Printed Circuit Assembly. See the controller installation manual for wiring diagram.
6. Snap the front housing onto the back housing.

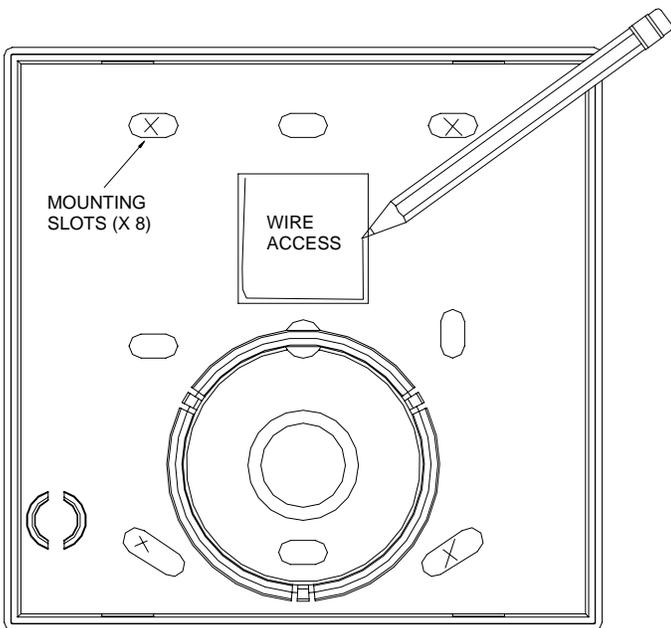

Audio Consoles have a built-in Speaker and Microphone. These Consoles are used for voice messaging, two-way communication with a central station, and voice annunciation of alarms.


Note: Do not mount Audio Consoles near any noise producing devices (fans, air conditioning units, audio speakers, etc.).

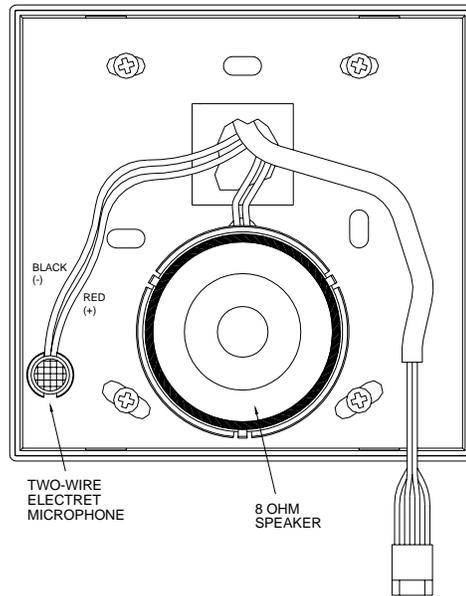

Microphones should be connected 24 AWG or larger, shielded twisted pair wire. Wire length should not exceed 100feet. Connect the cables and negative wires together at the Two-Way Audio/Voice Alarm Module terminal block only.

Do not connect the shield on the microphone end.

Speakers should be connected with 18 AWG or larger, twisted pair wire. For wire runs that exceed 50 feet, use 16 AWG wire or larger. Wire length should not exceed 100 feet.

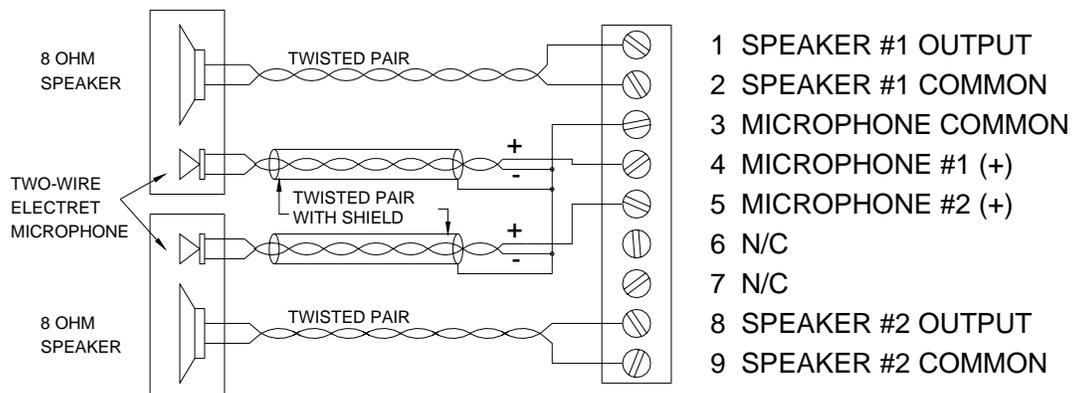

SPEAKER AND MICROPHONE CONNECTIONS